


Mounting Recommendations

Camcode Warehouse Floor Labels

- Optimal Location is in between open bays.
- Close to bay entrance.
- Allows operator to easily scan Floor Label as they enter/exit the bay.
- Keeps labels away from main traffic in the aisles.

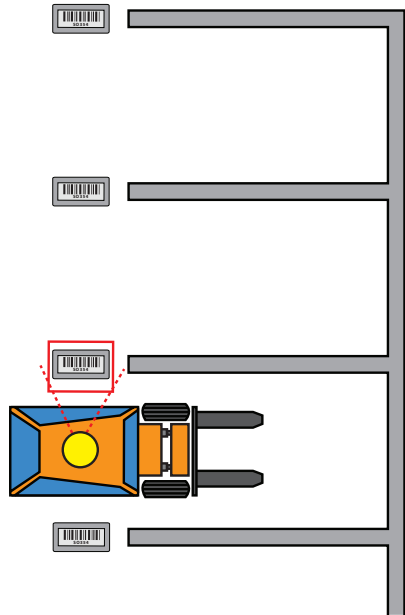

To Replace Label

Camcode Warehouse Floor Labels

Place flat-head screw driver into the notched slot in the frame. Work the tip of the screw driver under the edge of the label and pry up until the label dislodges. To install a replacement label, follow step 6 of the installation instructions.



Aluminum label with frame after months of extensive lift truck and pallet traffic.

Warehouse Floor Labels by



18531 South Miles Road
Cleveland, Ohio 44128
USA

phone (800) 627.3917

fax (216) 587.4719

email customer_service@camcode.com

www.camcode.com



Warehouse Adhesive-Backed Floor Label

Mounting Instructions



Installation

Camcode Warehouse Floor Labels

For optimal adhesion, minimum application temperature of the frame and floor is 50°F (10°C).

Service temperature ranges from 0°F to 180°F. Camcode recommends the Screw-Down Floor Label Kit for freezer applications.

Items required to install:

- Stiff bristle brush
- Greased Lightning® (or similar alkaline cleaner)
- paper towels



Step 1:

Clean floor where label is to be placed with Greased Lightning or other alkaline cleaner. For extremely dirty floors, consider using a Scotch Brite® pad with degreaser.



Step 2:

Wipe up cleaner with a clean, dry paper towel.



Step 3:

Wipe down surface with a clean, damp paper towel to remove any residual cleaner.





Step 4:

Wipe up any surface moisture with a clean and dry paper towel.

Step 5:

Remove the release liner and position the frame carefully before positioning on the floor because the frame will be difficult to reposition once contact has been made.

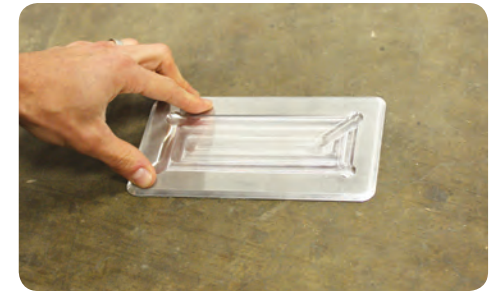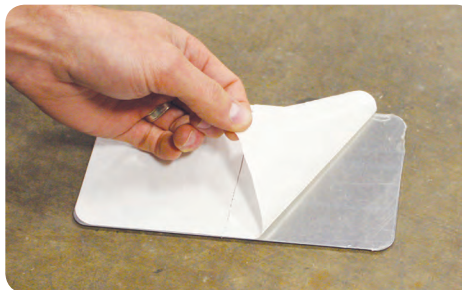

Step 6:

Remove the release liner from the Metalphoto® aluminum label and apply the label into the recessed area of the frame.



While the frame will adhere to the floor immediately, the bond strength will increase over the next 72 hours after application. It is recommended that the frame not be subjected to full warehouse traffic for the first three days.



Greased Lightning® is a Registered Trademark of BioLab Inc.
Scotch Bright® is a Registered Trademark of 3M.
Metalphoto® is a Registered Trademark of Horizons Incorporated.